



103115	OVERALL BELT GUARD COMPLETE	103507	3/8" EXTERNAL CIRCLIP	212209	MOTOR PLATE TOGGLE	211503	BEARING 7205
103136	BAKELITE HANDNUT	103513	No 3 WOODRUFF KEY	211301	SPINDLE WASHER	211504	25.MM EXTERNAL CIRCLIP
212304	BEARING CAP (UPPER SLEEVE)	104515	BELT GUARD NAME PLATE	211302	QUILL SHIM	211505	52.MM INTERNAL CIRCLIP
103214	SHIM 30 MM O.D.	104520	TABLE SUPPORT LOCKING HANDLE KNOB	211407	PINION	211806	O' RING 6227/31
103202	STOP	103527	MOTOR PULLEY 3-STEP	211408	DIAL PRESSURE CAP	212507	1 1/2" EXTERNAL CIRCLIP
104403	HANDLE BOSS	104528	BEARING 6002 VVCM	211409	QUILL	212509	TOGGLE LINK CIRCLIP 10 MM
104404	CAPSTAN SPOKE	104529	INTERMEDIATE DRIVE PULLEY	211410	SPINDLE (A.C.)	211510	TOGGLE SPRING (TOP)
103405	STOP SCREW	103535	5/8 ELMACO CONDUIT BUSH	211411	DRIVE SPINDLE	211511	TOGGLE SPRING (BOTTOM)
103406	STOP PIN	103538	MOTOR PULLEY 4-STEP	212412	CASTELLATED PULLEY SPINDLE	212514	SPEED CHART
104412	UPPER SLEEVE NUT	103541	MOTOR 3/4 HP 3.0	212413	BEARING SPACER (PULLEY SPINDLE)	211515	BELT A32
104419	INTERMEDIATE DRIVE BLOCK	104581	15 MM EXTERNAL CIRCLIP	212414	ANCHOR PIN (RETURN SPRING)	211516	BELT A27
104420	INTERMEDIATE DRIVE SPINDLE	211102	SWITCH & LEAD ASSEMBLY	212417	HEAD PIVOT PIN	211518	MOTOR 1.H.P. 3.0
104421	INTERMEDIATE DRIVE HANDLE	211115	DIAL & STRIP ASSEMBLY	212418	TOGGLE LINK PIN	212523	BEARING 6205 VVCM
102423	INTERMEDIATE DRIVE PLUNGER	212205	HEAD	212419	TOGGLE HANDLE	211526	O' RING 6227/18
103501	HANDLE BOSS SPRING	212206	HEAD PULLEY 4-STEP	212420	TOGGLE LINK	211527	BELT A48
104502	CAPSTAN SPOKE KNOB	212207	MOTOR PLATE	212421	MOTOR PLATE PIVOT PIN	212534	O' RING 6230/2
103503	STOP SCREW SPRING	212208	MOTOR PLATE HINGE	211501	RETURN SPRING		